

INSTALLATION AND OPERATION INSTRUCTIONS EN



Askoll ENERGY SAVING

ES2

ES2 ADAPT

ES2 SOLAR

ES2 PURE

1 Declaration of conformity

We Askoll Sei S.r.l. declare under our sole responsibility that the family of products Askoll ENERGY SAVING to which this declaration relates are in conformity with the Council Directives on the approximations of the laws of the EC Member State relating to:

- EMC Directive (2004/108/EC)
 Standard used: EN 61000-3-2:2006, EN 61000-3-3:2013, EN 55014-1:2006, EN 55014-2:1997 (including amendments)
- LVD Directive (2006/95/EC)
 Standard used: EN 62233:2008, EN 60335-1:2012, EN 60335-2-51:2003 (including amendments)
- ErP Directive (2009/125/EC)
 Commission Regulations n. 641/2009 and n. 622/2012
 Applies only to circulators marked with the energy efficiency index EEI. See the pump nameplate.
 Standard used: EN16297-1:2012 and EN16297-2:2012
- RoHS II Directive (2011/65/EU)

Sandrigo, 1st January 2014

Elio Marioni President Askoll SeiS.r.l.

Via Galileo Galilei, 89/91 - Sandrigo (VI) - Italy

Person authorized to compile technical file and empowered to sign the EC declaration of Conformity.

2 Contents

1	De	claration of conformity	2
2	Coi	ntents	3
3	Ind	lication of instructions	5
4	Imp	portant safety and installation instructions	6
5	Fie	ld of application	9
	5.1	Types of system	9
	5.2	Pumped liquids	9
6	Pro	oduct information	10
	6.1	Description of the product	10
	6.2	Type key	10
	6.3	Name plate	11
	6.4	Components	11
	6.5	Supply	11
	6.6	Technical data	12
7	Ins	tallation at Site	14
	7.1	Installation	14
	7.2	Permissible installation positions	15
	7.3	Motor housing regulation	15
	7.4	Insulation of pump housing	16
8	Ele	ectric connection	17
9	Coi	mmissioning	18
	9.1	Start-up of the circulator	18
	9.2	Operating elements	18
	9.3	Mode of operation	19
	9.4	Automatic detection of the presence of air - Vent system	20
1() (Circulator setting	21
1	1 F	Performance curves	22
	11.1	Performance curves - ES2 60	22
	11.2	Performance curves - ES2 70	22
	11.3	Performance curves - ES2 C 60	23
	11.4	Performance curves - ES2 C 70	23
	11.5	Performance curves - ES2 ADAPT 60	24
	11.6	Performance curves - ES2 ADAPT 70	24
	11.7	Performance curves - ES2 SOLAR 60	25
	11.8	Performance curves - ES2 SOLAR 70	25
	11.9	Performance curves - ES2 PURE C 40	26

ENERGY SAVING

12	Maintenance	27
13	Faults, causes and remedies	27
13.	8.1 Fault finding table	27
13.	3.2 Unlocking procedure	28
14	Spare parts	28
15	Disposal	28

These instructions include information necessary to assemble and use the product correctly. Besides respecting the general safety regulations, it is necessary to observe all points specifically and specially marked.

3 Indication of instructions

This manual contains information and prescriptions marked by the following symbols.



The inobservance of the safety provisions marked by the symbol "caution: hazard" may endanger the safety of people.



The inobservance of the safety provisions marked by the symbol "caution: electricity" may endanger the safety of people, as well as the integrity of things.



The inobservance of the safety provisions marked by the word "CAUTION" may endanger the integrity and functionality of the equipment and of the machines.

The Quick Guide contains following warning symbols.



The circulators are not to be used to transfer flammable liquids such as gasoline, oils, gas oil or similar liquids.



The circulators are not to be used to transfer aggressive liquids, such as acids and sea water.



CAUTION

The removal of the screws can cause the output of hot fluids under high pressure from heating system. Drain the system or close the isolating valves.



CAUTION

High temperature surface. Pay utmost care to prevent people from getting in contact with the hot surfaces of the circulator.

4 Important safety and installation instructions

Prior to installation, read these installation and operating instructions. The installation and operation should also be in accordance with national regulations and accepted codes of good practice.



This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge, only if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



To guard against injury, basic safety precautions should be observed, including the following:

1. Read and follow all safety instructions and all the important notices on the appliance before installing, using and maintaining the circulator. failure to do so may cause personal injury or damage to the circulator or installation.



2. Always disconnect electrical supply before putting on or taking off parts and whilst the equipment is being installed, maintained or handled. Never work with bare feet and/or with wet hands.



3. To avoid possible electric shock, special care should be taken since water is used with electrical equipment. Carefully examine the circulator before and after installation. Do not operate the circulator if it has a damaged supply cord or enclosure, or if it is malfunctioning or it is dropped or damaged in any manner. Inspect the circulator periodically.

The circulator should not be electrically supplied if there is water on parts not intended to be wet.



4. Risk of scalding.

To avoid injury before any servicing operation wait until the water has cooled inside the circulator. Do not touch the fluid or the circulator when temperature is higher than 60°C.

5. Improper use

This is a circulator to be used in heating plants and for the circulation of clean water without abrasive particles. This is not a submersible pump.

- Do not use this circulator:
- With liquids other than water (e.g. flammable liquids, etc.) (EN60335-2-51);
- For handling drinkable water or food related liquids;
- For the circulation of domestic water;
- In locations where special condition prevail, such as the presence of a corrosive or explosive atmosphere (dust, vapor or gas) (EN60335-2-51);
- For other than intended use.

Never run the circulator dry. The circulator must be always fully filled with water when operating.



The circulator must be mounted in a stable/fixed position in a dry, well ventilated, frost-free, waterproof and protected place, with sufficient ventilation around it. Make sure that the circulator is securely and correctly installed before operating it and that there is enough room around it for maintenance operations, dismantling, checking for free inspection.

The maximum ambient temperature at which the pump is to be used is 40°C (EN60335-2-51).

To avoid circulator overheating, do not place any object on the circulator itself.

7. Electric connection

IMPORTANT: Connection to the power supply must be effected by means of a fixed power cable which is fitted with a plug-type connection or an all-pole isolating switch with a minimum contact opening of 3 mm.

Electrical connection must be carried out only by a qualified electrician and in accordance with local regulations and both data on the name-plate and the appropriate diagram inside the terminal box cover.

Follow all safety standards.

Do not connect to mains supply unless circulator is fully and correctly assembled.



8. Supply cord must be selected following the requirements of EN60335-2-51 Chapter 25. Supply cord must be protected against any kind of mechanical damage (cuts, abrasion, etc.). It must not touch the pipe or the pump. (EN 60335-2-51). If the insulation of the Supply cord can come in contact with parts having a temperature exceeding 70°C the supply cord insulation must be protected, for example, by insulating sleeving having an appropriate temperature rating. (EN60335-2-51).



- **9.** Connect circulators only to a mains supply protected by a Residual Current Device (RCD or Ground-Fault Circuit-Interrupter) with a rated residual operating current not exceeding 30mA.
- **10.** Any modification to the equipment must be prior agreed upon with and authorized by the manufacturer. Original spare parts and accessories authorized by the manufacturer are integral part contributing to the safety of the equipment and of the machines. The use of not original components or



accessories may endanger the safety and causes the termination of the warranty. A safe operation is assured only for the applications and conditions described in \rightarrow **5 Field of application** of this manual.

Non-observance of the safety instructions results in the loss of any claims to damages.



The indicated limit values are binding and cannot be exceeded for any reason whatsoever.

KEEP THESE INSTRUCTIONS FOR FUTURE REFERENCE.

5 Field of application

5.1 Types of system

Models	Uses
ES2 ES C A	Circulation of water/liquids in hot water heating systems of all kind and in similar systems: One-pipe systems Two-pipe systems Systems with constant or variable flows Underfloor heating systems Boiler or primary circuit Storage tank circuit
ES2 ADAPT ES2 SOLAR	Circulation of water/liquids in hot water heating systems and in renewable energy solar thermal systems: Solar thermal systems One-pipe systems Two-pipe systems Systems with constant or variable flows Underfloor heating systems Boiler or primary circuit Storage tank circuit
ES2 PURE	Domestic hot water circulation, drinking water circulation systems and similar domestic and industrial circulation systems. This circulator is suitable for drinking water only.

5.2 Pumped liquids

Clean liquids, not aggressive and not explosive, not containing solid particles, fibers or mineral oils. In heating systems:

Water for heating according to VDI 2035.

Mixtures of water and glycol with glycol percentages not greater than 30%.

In domestic hot water circulation systems, max. 38°d water hardness.

Any other use is regarded as incorrect use. For the use with other fluids, manufacturer's authorization is required.



- The circulators are not to be used to transfer flammable liquids such as gasoline, oils, gas oil or similar liquids.
- The circulators must never be used in refrigeration systems, air conditioning systems and similar installations.

6 Product information

6.1 Description of the product

The Askoll ENERGY SAVING are a range of innovative wet rotor circulators with an integrated frequency converter (INVERTER). Askoll ENERGY SAVING circulators combine an advanced hydraulic system, a high efficiency motor, an intuitive electronic control and an operating software that allow to perfectly adapt to the various operating conditions and the actual needs of the system. The motor with electronic control module is mounted on the pump housing by four screws. The criteria for differential pressure control depend on the set operating mode. In all operating modes, the circulator adapts to the different loads of the system.


Askoll ENERGY SAVING provides excellent benefits:

- 1. Energy saving
- 2. Compact design
- 3. Ideal performance
- 4. Easy installation and adjustment

The Askoll ENERGY SAVING circulator range is available in the following versions:

ES2	Standard version with operating modes P, C and min-max.	
	Pump housing available in cast iron, plastic composite material (C) and plastic composite material with air separator (C A)	
ES2 ADAPT	Premium version with operating modes activeADAPT, P, C and min-max.	
	Pump housing available in cast iron.	
ES2 SOLAR	Solar thermal systems version with operating modes P and min-max.	
	Pump housing available in cast iron.	
ES2 PURE	Domestic hot water circulation systems with operating mode min-max.	
	Pump housing available in plastic composite material (C)	

6.2 Type key

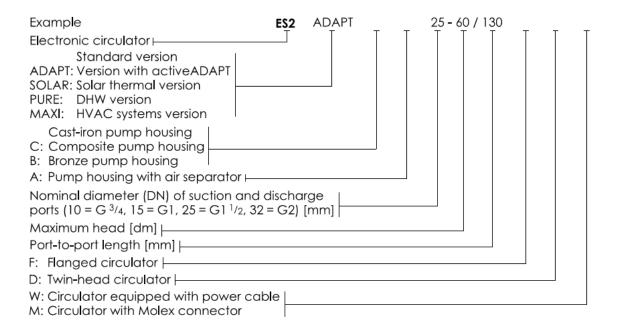

6.3 Name plate

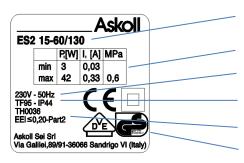


Fig. 6.1: Name plate (example)

- 1 Type
- Input power $P_1[W]$ / Input curren $I_1[A]$ / System pressure [MPa]
- 3 Voltage, frequency
- 4 Temperature class / Protection class
- 5 Energy Efficiency Index (EEI)
- 6 CE mark / Appliance class / Quality mark

6.4 Components

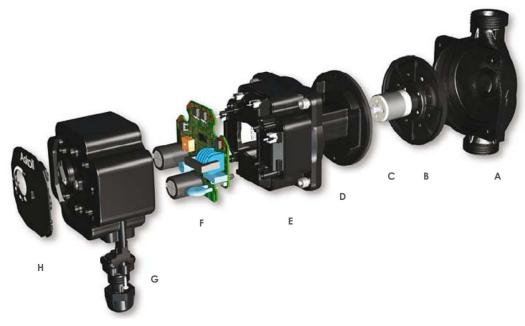


Fig. 6.2: Exploded view

Α	Pump housing	Е	Stator
В	Impeller and bearing plate	F	Electronics
С	Rotor	G	Motor housing
D	Can	Н	Front cover

6.5 Supply

- Complete circulator.
- Two flat seals in EPDM.
- Thermal insulation shells in EPP (supplied as standard only for mod. ES2 ADAPT)
- Instructions for assembly, use and maintenance.

6.6 Technical data

Power supply	1x230 V -10%/+6%, 50 Hz		
Adjustment of the rotation speed	Manual by selector		
Motor protection	Not required		
Insulation class	Н		
Protection class	IP 44		
Appliance class	II		
Ambient temperature	from +2°C to +40°C		
	ES2		
	ES2 C	from +2°C to +95°C	
Allowed liquid temperature	ES2 C A		
- monou inquia componación	ES2 PURE C		
	ES2 ADAPT	from +2°C to +110°C	
	ES2 SOLAR		
Maximum relative humidity	≤ 95%		
	ES2		
	ES2 C	0,6 MPa (6 bar)	
Maximum operating pressure	ES2 C A		
	ES2 ADAPT		
	ES2 SOLAR	1,0 MPa (10 bar)	
	ES2 PURE C		
	Minimum pressure	Liquid temperature	
Minimum pressure on the intake opening ¹	0.03 MPa (0.3 bar)	50°C	
g	0.10 MPa (1.0 bar)	95°C	
	0.15 MPa (1.5 bar)	110°C	
Sound pressure level	< 43 dB(A)		
EMC (electromagnetic compatibility)	EN 61000-3-2 / EN 61000-3-3		
	EN 55014-1 / EN55014	1-2	
	ES2 60		
	ES2 ADAPT 60	EEI ≤ 0,20 - Part 2	
	ES2 SOLAR 60		
a 141 1 2	ES2 C 60		
Specific FFI values *			
Specific EEI values ²	ES2 C 70		
Specific EEI values ²	ES2 C 70 ES2 70	EEI ≤ 0,21 - Part 2	
Specific EEI values ²	ES2 C 70 ES2 70 ES2 ADAPT 70	EEI ≤ 0,21 - Part 2	
Specific EEI values ²	ES2 C 70 ES2 70	EEI ≤ 0,21 - Part 2	

_

¹ To avoid cavitation noise, minimum pressure values on the intake opening must be strictly respected.

 $^{^{2}}$ The benchmark for most efficient circulators is EEI \leq 0,20.

To avoid condensation in the motor and the electronics the temperature of the pumped liquid must always be greater than the ambient temperature.

	Ambient temperature	Liquid temperature		
	[°C]	Min. [°C]	Max. [°C]	
	0	2	95	
	10	10	95	
ES2	20	20	95	
ES2 C	30	30	95	
	35	35	90	
	40	40	70	
	0	2	110	
	10	10	110	
ES2 ADAPT	20	20	110	
ES2 SOLAR	30	30	110	
	35	35	90	
	40	40	70	

7 Installation at Site



Installation and service by qualified personnel only!

7.1 Installation

The circulator must be mounted in a stable/fixed position in a dry, well ventilated, frost-free, waterproof and protected place, with sufficient ventilation around it.

Assemble the circulator only after having ended all welding and brazing works on the hosing. Before installing the circulator, make sure that the internal part of the tubes is clean.

Install the circulator in an accessible place for future checks and disassembly procedures. Foresee enough space for inspections and disassembling.

Foresee isolating valves at intake and output (before and after the circulator) to allow the disassembly without emptying the plant. The assembly of the interception organs must be carried out in such a way as to prevent possible water leaks from involving the terminal board. Perform the assembly without mechanical stresses acting on the circulator.



Avoid the installation in misaligned pipe work.

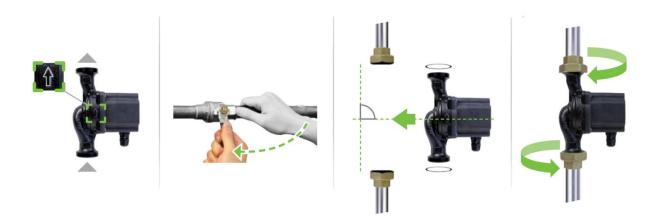


Fig. 7.1: Mounting procedure.

The direction of the water flow is indicated by the arrow on the pump housing, as shown in Fig. 7.1.

- 1. Check that both isolating valves are closed
- 2. Install the circulator with the motor shaft in horizontal position. Connect the piping without transmitting any stresses and strains.
- 3. Accurately insert the two gaskets supplied.
- 4. Establish a screwed connection between circulator and piping.
- 5. Tighten the screwed connection hand with an assembly tool (e.g. pipe wrench).

Thread	Pump housing material	Tightening torque
G1	Composite PA 66 GF	Max. 50 Nm
G1	Cast Iron EN-GJL-200	Max. 85 Nm
G1½	Cast Iron EN-GJL-200	Max. 125 Nm
G2	Cast Iron EN-GJL-200	Max. 165 Nm

7.2 Permissible installation positions



Install the circulator with horizontal motor shaft axis (Fig. 7.2).



Fig. 7.2: Permissible installation positions

7.3 Motor housing regulation



Fig. 7.3: Motor housing positions

The motor body can be rotated in the positions shown in Fig. 7.3.



Pay utmost care to prevent people from getting in contact with the hot surfaces of the circulator.

Drain the system or close the isolating valves on either side of the pump before the screws are removed. The pumped liquid may be scalding hot and under high pressure.

CAUTION

Pay attention not to damage the seal of the pump housing.



Fig. 7.4: Changing the motor body position

Procedure (Fig. 7.4):

- 1. Slacken and remove the four screws M5 holding the motor.
- 2. Turn the motor to the desired position without extracting it from the pump housing.
- 3. Insert and tighten the pump housing screws (The tightening torque of the screws of the pump housing must correspond to a value of 3.3 ± 0.5 Nm).

7.4 Insulation of pump housing



Fig. 7.5: Insulation of pump housing

The heat loss from the pump and pipework can be reduced by insulating the pump housing and the pipe with the thermal insulation shells supplied with the circulator (supplied as standard only with model ES2 ADAPT) \rightarrow Fig. 7.5.

The thermal insulation shells can be ordered separately.

CAUTION

Do not insulate the control box or cover the control panel.

8 Electric connection



The electric connection has to be performed by a qualified electrician in compliance with the national regulations. Follow the safety regulations and installation regulations of your country.



Connection to the power supply must be carried out in compliance with the standards via a fixed power cable which is fitted with a plug-type connection or an all-pole isolating switch with a minimum contact opening of 3 mm.

The circulator belongs to class II and therefore grounding is not necessary. The circulator does not require any external protection of the motor. Compare the frequency and the voltage of the mains with the rating data. All electric information concerning the circulator is on the signaling plate. The connection cord must be laid in such a way as it cannot come in contact with the hosing or the motor body. In case of use of the circulator with fluids at a temperature higher than 70 °C, use a connection cord resistant to high temperatures.

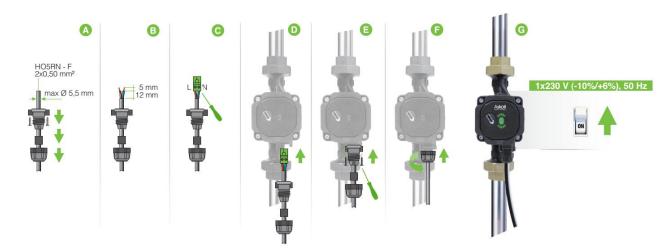


Fig. 8.1: Electric connection

- 1. Connect the power supply conductors to the terminals according to the diagram given in Fig. 8.1, from A to C.
- 2. Insert the terminal board in the proper seat, connecting the blue wire (neutral) with letter N and the black/brown wire (phase) with letter L. (Fig. 8.1.D).
- 3. Screw the two screws (Fig. 8.1.E The tightening torque of the screws must correspond to a maximum value of 0,3 Nm).
- 4. Tighten the sealing nuts to the fairlead (Fig. 8.1.F The tightening torque must correspond to a maximum value of 2 Nm).
- 5. The LED light, if lighted, indicates that the power supply is present. (Fig. 8.1.G).

CAUTION

9 Commissioning

Start-up of the circulator

Absolutely avoid dry operation. Start the circulator only after having completely CAUTION filled the plant. Circulators with permanent magnets can not be driven in speed by means of **CAUTION**

phase control of the supply voltage.

Circulators driven by an electronic frequency converter have a current peak at each activation (inrush current) greater than traditional circulators (asynchronous). The activation stage of the circulator has to be size taking into account this current peak. For further details contact the manufacturer.

Activation frequency: activations/deactivations through the mains voltage ≤ 20/24 h.

9.2 Operating elements

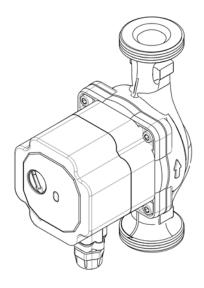


Fig. 9.1: Selector and LED light

Selector

All settings are made using the selector on the housing front.

The selector can be adjusted in a continuous way with a rotation angle of 270 °.

The arrow on the selector indicates the operating mode chosen.

LED light

The LED light on the front advises the commissioning/fault of the circulator.

Every operating mode is characterized by a fixed light of different colour.

After a change of operating mode, the LED pulses 5 times. The pulse will be a change of brightness intensity of the LED light.

9.3 Mode of operation

A LED provides information about the operation status of the circulator.

LED	COLOR	DESCRIPTION
activeADAPT	Violet	activeADAPT mode The activeADAPT mode enables the circulator to actively adapt its performance to the demands of the system during short control intervals inside a defined control area. Improves the hydraulic balance of the system Ensures optimum performance during partial load periods Enables quick installation
	Green	P mode (\(\Delta p-v\)) – Proportional differential pressure The circulator head is proportionally reduced at falling water demand and increased at rising water demand. The circulator head is proportionally reduced with decreasing of the heat demand from the heating system (flow rate decrease) and is proportionally increased with increasing demand of the heat demand from the heating system (flow rate increase).
	Orange	C mode (△p-c) - Constant differential pressure The circulator maintains a constant pressure level (head) irrespectively of the heat demand required from the heating system (flow rate).
min - max	Blue	min-max mode– Fixed speed The circulator maintains a fixed speed irrespectively of the heat demand from the heating system (flow rate). The speed regulation is done by positioning the selector in a gradual manner at any point between the Min and Max positions. Should this performance be insufficient, progressively increase the set value. Should this performance be excessive or should noise arise due to the speed of the pumped fluid, progressively reduce the calibration.
Q air ₹	Flashing white	Automatic detection of the presence of air. Proceed with the vent routine
	Red	Fault or malfunction → 13 Faults, causes and remedies

9.4 Automatic detection of the presence of air - Vent system.



Fig. 9.2: Filling and venting of heating systems

Fill and bleed the system correctly.

The circulator can be noisy at start due to the presence of air. Such noise should stop after few minutes of operation. Usually the pump rotor chamber normally bleeds automatically after a short time in operation.

The circulator is equipped with a special software system that detects the presence of excess of air within the heating system. The LED shows the presence of air in the hydraulic circuit by flashing and performing a rapid succession of WHITE colour.

Following the light signal, it's possible to easily vent the heating system as follows:

- 1. Open the air vent valve in the hydraulic circuit above the circulator or open the cap of the air separator in the pump housing, partially unscrewing it; when unscrewing the cap of the air separator, beware of not losing the cap itself;
- 2. set the circulator to MAX position (maximum performance setting);
- 3. let the circulator run for a short period, according to the construction and the plant size;
- 4. once vented the system the guide light (LED) stops blinking and the possible noise stops set the circulator as indicated in **Par.10 Circulator setting**

Repeat the procedure if necessary.



The plant cannot be drained by using the circulator.


With solar thermal systems, fill the system with mixtures prepared for that application. The circulator cannot be used to mix the fluids in the system.



Do not touch the fluid or the circulator when the temperature is greater than 60 °C. Hazard of scalding by simple contact.

10 Circulator setting


Modify the performance of the circulator (head) as needed by rotating the selector using a flat screwdriver, as given in the following table. The selection of the right functioning curve depends on the characteristics of the heating system in question and the actual heat demand.

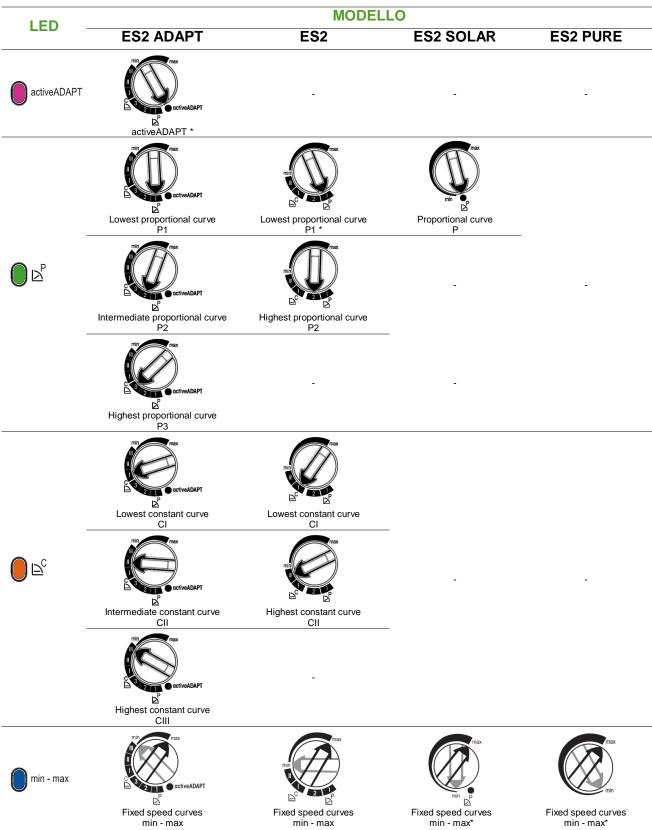


^{*} Factory setting

11 Performance curves


11.1 Performance curves - ES2 60

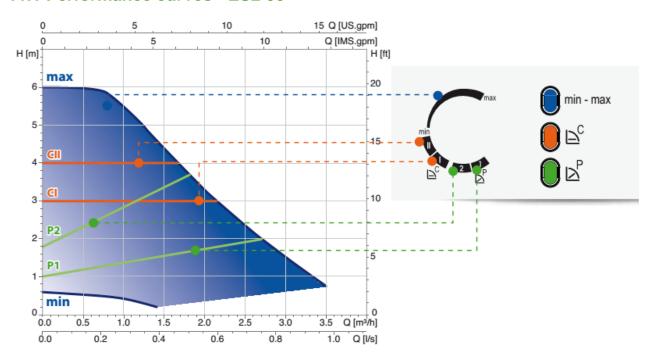


11.2 Performance curves - ES2 70

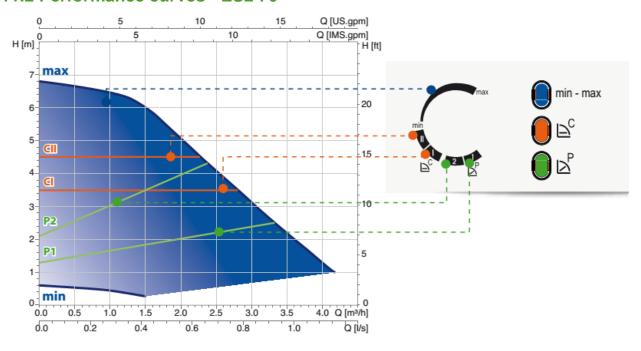


11.3 Performance curves - ES2 C 60

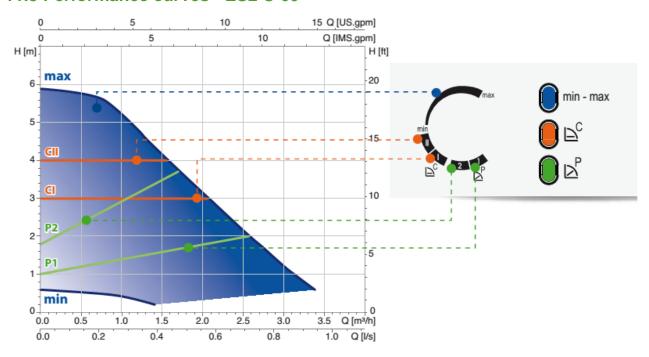


11.4 Performance curves - ES2 C 70

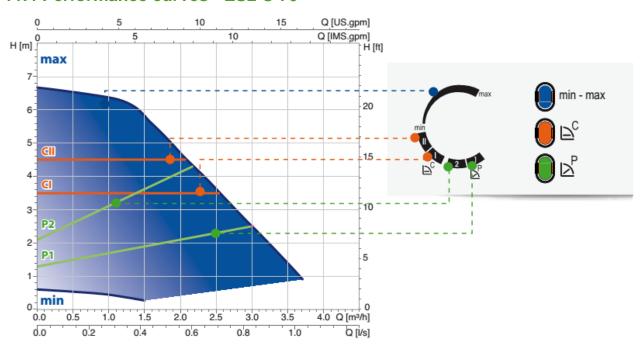


11.5 Performance curves - ES2 ADAPT 60

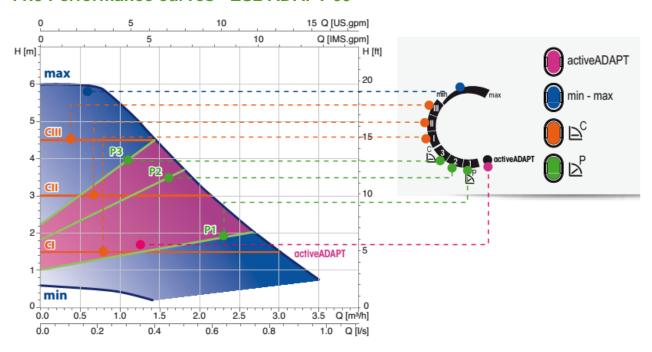


11.6 Performance curves - ES2 ADAPT 70

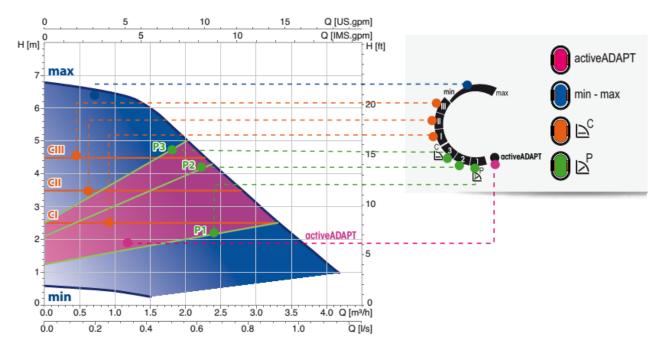


11.7 Performance curves - ES2 SOLAR 60

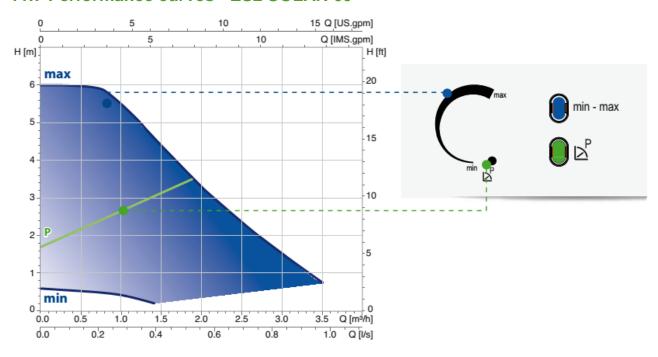

11.8 Performance curves - ES2 SOLAR 70

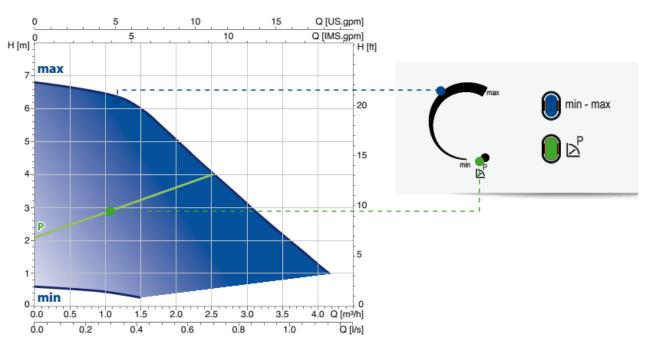

11.9 Performance curves - ES2 PURE C 40

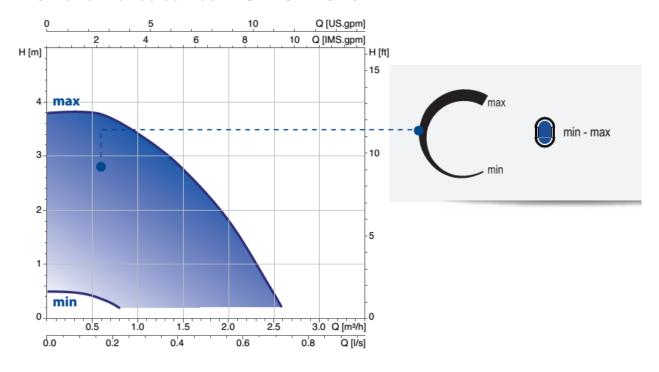

12 Maintenance

The circulator does not require any special maintenance during operation. Motor bearings are lubricated by the pumped liquid.



Before each maintenance intervention, disconnect power supply and wait for the circulator to cool.

13 Faults, causes and remedies

13.1 Fault finding table

FAULTS	CONTROL PANEL	CAUSES	REMEDIES
The circulator is	LED on	Suction pressure is insufficient - cavitation	Increase the system suction pressure within the permissible range.
noisy	LED on	Presence of foreign bodies in the impeller	Disassemble the motor and clean the impeller
Loud noises of water circulation	Flashing white LED	Air in the system	Vent the system (→ 9.4 Automatic detection of the presence of air - Vent system.)
	LED on	The flow is too high	Reduce the rotation speed (\rightarrow 10 Circulator setting)
Circulator is not running although the electrical power supply is switched on	LED off	Lack of power supply	Verify voltage value of the electric plant Verify the connection of the motor
		One fuse in the installation is blown	Verify the fuses of the plant
		The circulator is defective	Replace the pump.
		Overheating	Let the pump cool down for some minutes. Then try to re-start it. Verify that the water and ambient temperature are within the indicated temperature ranges.
	LED red	The rotor is blocked	Disassemble the motor and clean the impeller if the Should you fail to eliminate the cause of the malfunction, refer to the Distributor or nearest Service Center. doesn't succeed (→ 13.2)
		Insufficient supply voltage	Verify that the power supply matches the data on the name plate.
Building does not get warm.	LED on	The circulator performance is too low	Increase the suction head (→10 Circulator setting)

Should you fail to eliminate the cause of the malfunction, refer to the Distributor or nearest Service Center.

13.2 Unlocking procedure

A red light in the LED indicates a locking.

Turn the selector to the position **max**, disconnect and connect power supply to start the automatic release process.

The circulator operates 100 attempts to restart (process lasts approximately 15 minutes). Every restart is signalled by a short flash of LED light. If the locking is not removed through the automatic release process after 100 attempts to restart the circulator, it goes into standby and the LED remains red. In this case follow the manual procedure described in the next steps: during any attempt, the red LED light keeps blinking; after that the circulator tries again to start. If the locking is not removed through the automatic release process (the warning light returns to be red), it is necessary to perform the manual proceeding described in the next steps:

Disconnect power supply - the warning light switches off.

Close the interception organs upstream and downstream of the circulator and let it cool.

Disassemble the motor and clean the impeller.

- 1. Disconnect power supply the warning light switches off.
- 2. Close both isolating valves and allow cooling. If there are no shut-off devices, drain the system so that the fluid level is beneath that of the circulator.
- 3. Carefully pull the rotor/impeller
- 4. Remove impurities and deposits with appropriate agents.
- 5. Reinsert the rotor/impeller
- 6. Set the selector on the wished position.
- 7. Connect power supply.

If the circulator doesn't run \rightarrow 13 Faults, causes and remedies.



With high fluid temperatures and pressures there is the risk of burnings. Hazard of scalding by simple contact.

14 Spare parts

Spare parts are ordered via local specialist retailers.

Should you need to order any spare parts, always provide all rating data of the circulator.

15 Disposal

The correct disposal and recycling of this product will prevent damage to the environment and risks to human health.

- 1. Use public or private disposal organisations when disposing of all or part of the product.
- 2. For information about proper disposal, it is necessary to ask to the city administration, the authorized office or the retailers of the product.

Reserved right of modification

Askoll

Askoll Sei S.r.l. - Via Galileo Galilei, 89/91 - 36066 Sandrigo (VI) - ITALY Tel. +39 0444 666800 | Fax. +39 0444 666801 www.askoll.com